


Instrucciones de uso

Conexión: Conecte la fuente de alimentación y presione el botón del interruptor. Después de la electricidad, el atomizador comenzará a funcionar automáticamente. Presione nuevamente el botón para apagar la luz y la máquina de incienso.

Función de memoria de luz: Con el atomizador encendido presione la tecla de encendido de nuevo y encienda luz de ambiente colorida, presiona de nuevo para fijar el color y presiona de nuevo para apagar las luces y continúa atomizando y presione de nuevo para apagar la operación.

Función de apagado automático: Cuando el nivel de agua en el tanque sea insuficiente, la máquina dejará de funcionar automáticamente.

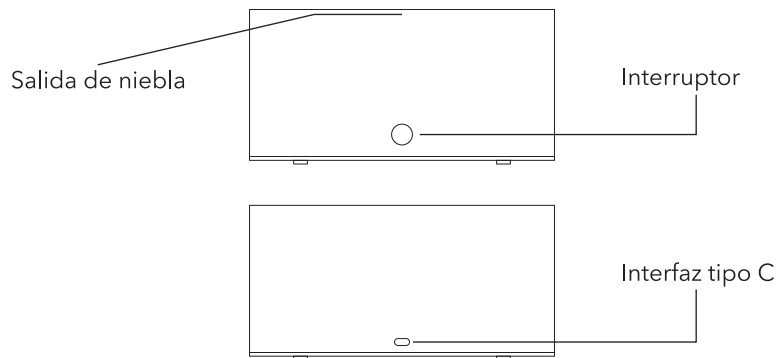

Precauciones

La cantidad máxima de agua en el tanque debe ser de 130 ml, y la cantidad de agua restante no puede exceder el nivel máximo del tanque.

Por favor, utilice fuentes de alimentación con 5V=1A para evitar daños en el atomizador.

Prohibido introducir agua en la entrada de aire en el cuerpo principal para evitar fallos de funcionamiento causados por entrada de agua.


El sonido emitido por el interior del tanque al usar el atomizador es el sonido del trabajo del atomizador, lo que es un fenómeno normal.

Directions for use

Connect the power supply; after powering on, the buzzer ticks (1 time). Press the switch once; the fog outlet will spray, and the atomization indicator light is on.

Light Memory Function: With the diffuser turned on, press the power button again to activate the colorful ambient light. Press again to fix the light color, and press once more to turn off the lights while continuing the diffusion. Press again to turn off the operation completely.

Automatic Shut-Off Function: When the water level in the tank is insufficient, the device will automatically stop functioning.

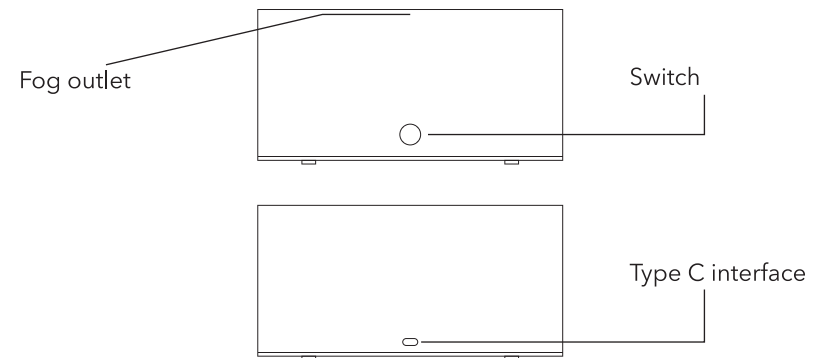

Precautions

The maximum volume of the water tank is 130 ml, and the water filled cannot exceed the maximum water level indication line.

Please use a power supply that meets the requirements; otherwise, it will affect the atomization effect or cause damage to the host.

Please do not pour water into the air inlet to avoid damage to the machine.

The sound emitted inside the water tank during work is the sound of the atomizer working, which is a normal phenomenon.